

Event Log of 701ServerSQL

訊息代碼	701ServerSQL 狀態訊息(英文)	701ServerSQL 狀態訊息(中文)
L22	Controller Off Line	控制器離線
L23	Controller Online	控制器重新連線
L24	Release door locker by PC	由電腦手動開門
L25	Relock door locker by PC	由電腦手動關門
L26	AR727CM Fire Alarm Release all doors	火警連動開門(AR727CM)

Event Log of Controller

訊息代碼	控制器狀態訊息(英文)	控制器狀態訊息(中文)
M00	Site code error	系統識別碼錯誤
M01	Invalid user PIN	無效用戶位址或不允許密碼通行
M02	Keypad Locked by over error limits times	連續發生錯誤,按鍵鎖定
M03	Invalid card	無效卡片
M04	Time Zone error	通行時段錯誤：不准在此時間進出
M05	Door Group error	通行門組錯誤：不准由此門進出
M06	Expiry Date	通行日期管制：超過期限
M07	Over access times	超出通行次數限制
M08	PIN Code error	密碼輸入錯誤
M09	Press duress PB	緊急求救鈕已啟動
M10	Access by Card and PIN	以刷卡加密碼方式通行
M11	Normal Access by tag	正常進出
M12	Force Controller Relay ON	開啟(ON)控制器上的繼電器
M13	Force Controller Relay Off	關閉(OFF)控制器上的繼電器
M14	Controller armed	控制器啟動警戒
M15	Controller disarmed	控制器解除警戒
M16	Egress	以外出按鈕開門
M17	Alarm event	發生警報
M18	Last Access Time	限次卡片最後一次進出
M19	Guard Access	巡邏員刷卡
M20	Controller Power Off	控制器關閉電源
M21	Duress	以脅迫密碼求救

M22	Guards for help	巡邏員求救
M23	Cleaner access	清潔員刷卡
M24	Controller Power On	控制器開啟電源
M25	Force Controller Relay On/Off Error	DO 連控超出有效範圍
M26	Controller Return to Normal(RTN)	控制器回復正常狀態
M27	Help push button pressed	求救按鈕已啟動
M28	Access by PIN (Key Only)	以密碼操作通行
M29	Digital input actives	DI 輸入點動作
M30	Anti-pass back Error	違反進出管制
M31	Multi-door Controller RS485 reader off line	716E RS485 讀卡機離線
M32	Multi-door Controller RS485 reader on line	716ERS485 讀卡機重新連線
M33	User PIN code changed	使用者自行更改密碼
M34	Change user PIN error	使用者更改密碼失敗
M35	Enter Auto Door Open Procedure	進入自動開門程序
M36	Exit Auto Door Open Procedure	結束自動開門程序
M37	Auto Disarmed	自動解除警戒
M38	Auto Armed	自動啟動警戒
M39	Access by fingerprint or finger vein	以指紋/靜脈通行
M40		
M41		
M42	Remote control "Up Key" pressed	遙控器按:往上
M43	Disable Reader	停用讀卡機
M44	Enable Reader	啟用讀卡機
M45	Remote control "Panic Key" pressed	遙控器按:緊急求救
M46	User entrance at parking system	停車場入車
M47	User exit at parking system	停車場出車
M48	Counter triggered at parking system	停車場計數遞增
M49	Latch Relay	繼電器鎖定
M50	Door Closed	門偵測(關閉)
M51	Door Open	門已開啟/互鎖禁止
M52		
M53	Enter/Exit Edit Mode	啟動/結束編輯模式
M54	TCP/RS485 IO event	TCP/RS485 IO 事件

M55	Free Access Mode Enable/Disable (SubFunc 0/1 is Dis/Enable)	在 721Ev2 底下的卡機直接設定『見卡即開』，開放全部卡片通行
M56	Access via Fingerprint Error	指紋/靜脈識別失敗
M57		
M58		
M59	Access Inhibit, maybe body temperature not accepted or some reason	禁止通行/體溫異常
M60	Never open door after card accessed	刷卡未開門
M61		
M62	Can't Read Date/Time from SOR card	不在 SOR 使用期限內
M63	Can't Read command from SOR card	SOR 指令執行錯誤
M64	Can't deduct from SOR card	SOR 扣點失敗
M65	SOR global card accessed	SOR 全球通行卡
M66	SOR disturber layer error	SOR 授權區別不符
M67	Access rejected : before begin date	SOR 使用期限未到
M68	Access rejected : expiry	SOR 使用期限逾期
M69	Access rejected : card value not enough	餘額不足
M70	Access ok and card value deducted	扣點成功
M71	Access ok and read lift data from media failed	電梯樓層資料讀取失敗
M72	SOR global access ok and card value deducted	SOR 全球通行卡扣點成功
M73	SOR global access reject by value not enough	SOR 全球通行卡餘額不足
M74	SOR global access ok but card value deducted failed	SOR 全球通行卡扣點失敗
M75	SOR global access ok without deducted	SOR 全球通行卡未扣點
M76	Balance Restore	充值與回存
M77	Master Card Access	母卡啟動
M78		
M79		
M80		
M81		
M82		
M83		
M84		

M85		
M86	Black table tag accessed	黑名單卡片讀卡
M87		
M88		
M89		
M90	Mailbox message, the subfunc will be 0x00=New letter, 0x01=Door Open 0x02=Open too long alarm 0x03=Door Closed	智慧信箱相關訊息，SUB-FUNC 定義訊息 0x00=信件投入 0X01=信箱開啟 0X02=信箱開啟太久警報 0X03=信箱關閉
M100	Access ok : access via vein	靜脈通行識別成功
M101	Access reject : access via vein	靜脈通行識別失敗
M102	Inhibit access due Internal manual lock	內鎖上鎖禁止通行
M103		
M104	Fire alarm input trigged	火警輸入已觸發
M105		
M106		
M107		
M108	Face ID Passed	人臉辨識通行成功
M109	Face ID Rejected	人臉辨識通行錯誤
M110	Car Plate ID Passed	車牌辨識通行成功
M111	Car Plate ID Rejected	車牌辨識通行錯誤
M112	Black list of Face ID	人臉識別黑名單
M113	Black list of Car Plate	車牌識別黑名單
M114	Cloud Time Attendance Duty Code	雲端考勤
M115	External verification passed and with data	儀器檢驗成功
M116	External verification failed	儀器檢驗失敗